

SDV-C2-T_RX (AVIP-P5104T_R-B1C)

Firmware Update Procedure

● MCU Update

1. Connect the USB/SERVICE PORT to the PC



2. Press “Enter”, then power on. POWER LED will start flashing.



3. PC will detect a “USB DEVICE”. Drag the .bin file into the “USB DEVICE”.





4. While the unit is updating, the POWER LED will keep flashing.
5. When the POWER LED lights solid, it means the update procedure is successful.


● AVP Update

1. **Make sure the MCU versions are TX: v2.19C or above, RX: v2.13C or above.**
2. Update the AVP version to v2.0.0.0 via WEB of CS7-S(SDV-CS8).

Files are:

SDV-CS-TX:  AVX_504C_T_20D8_V219C_AVP_V2.0.0.0.bin

SDV-C2-RX:  SdvoeR_20D9_V2.13C_AVP_V2.0.0.0.bin

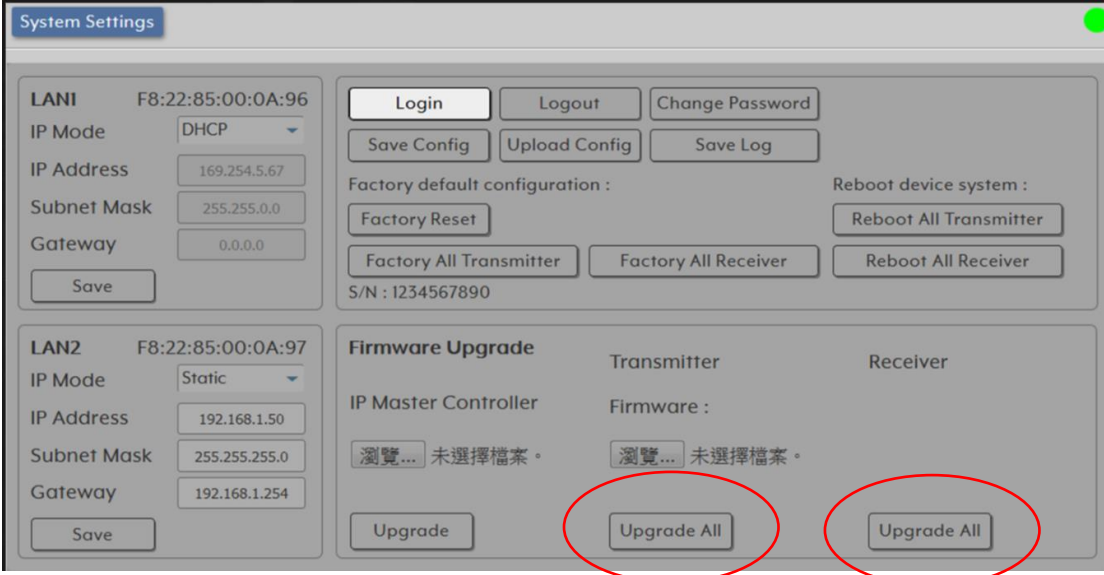

System Settings

LAN1 F8:22:85:00:0A:96
IP Mode: DHCP
IP Address: 169.254.5.67
Subnet Mask: 255.255.0.0
Gateway: 0.0.0.0
Save

LAN2 F8:22:85:00:0A:97
IP Mode: Static
IP Address: 192.168.1.50
Subnet Mask: 255.255.255.0
Gateway: 192.168.1.254
Save

Login Logout Change Password
Save Config Upload Config Save Log

Factory default configuration :
Factory Reset Reboot device system :
Factory All Transmitter Reboot All Transmitter
Factory All Receiver Reboot All Receiver
S/N : I234567890

Firmware Upgrade

Transmitter	Receiver
IP Master Controller	Firmware :
瀏覽... 未選擇檔案。	瀏覽... 未選擇檔案。
Upgrade	Upgrade All