




ASSEMBLY INSTRUCTION

etherCON® | NE8MX & NE8MX-B

Ruggedized RJ45 Data Cable Connector Carrier





- A** Special version remove the cover.
- A1** Cut off the release tab of RJ45 plug.

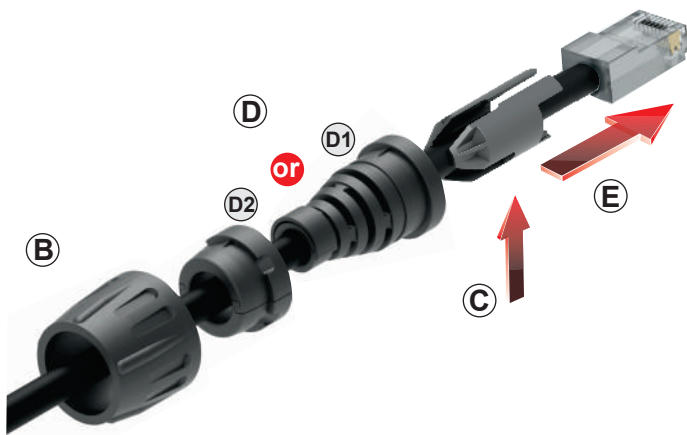

- B** Slide the bushing over the connector onto the cable.
- C** Put the chuck onto the cable. Align the opening with the contact side.
- D** Put the suitable boot on the cable:
 - D1: for cable O.D. 4.5 [0.18"] to 5 mm [0.2"]
 - D2: for cable O.D. 5.0 [0.2"] to 8 mm [0.3"]

STANDARD
VERSION

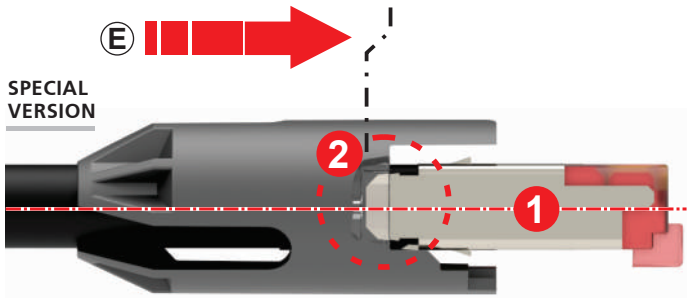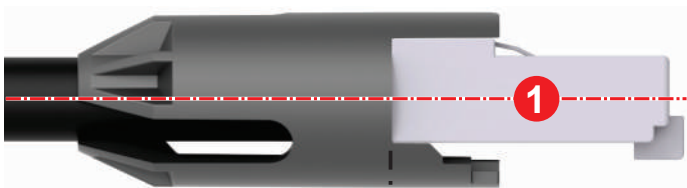


- E** Position the RJ45 in the chuck.

Attention:

- 1** RJ45 must be straight.
- 2** Special versions must engage in the inner recess of the chuck.



F Position the bushing onto the chuck.

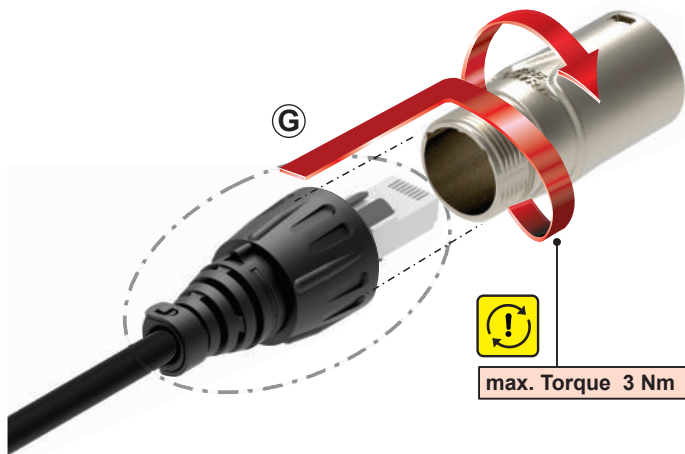

G Slide the unit (insert and boot) into the housing and tighten the bushing with **max. torque 3 Nm (2.2 lb-ft).**



H CAUTION:
There is no overlap allowed.



I Close the seal of the boot.

FINISHED etherCON® NE8MX:

Find more etherCON® details on www.neutrik.com.



NEUTRIK AG	LI	T: +423/237 24 24	F: +423/232 53 93	NEUTRIK France	FR	T: +33 1/4131 6750	F: +33 1/4131 0511
NEUTRIK USA Inc.	USA	T: +1 704 / 972 3050	F: +1 704/438 9202	NEUTRIK Tokyo Ltd.	JP	T: +81 3/3663 4733	F: +81 3/3663 4796
NEUTRIK (UK) Ltd.	UK	T: +44 1983 / 811 441	F: +44 1983/811 439	NEUTRIK Hong Kong Ltd.	HK	T: +852/2687 6055	F: +852/2687 6052
NEUTRIK Vertriebs GmbH	DE/NL/AT/DK	T: +49 8131 / 280 890	F: +49 8131/280 830	NEUTRIK India Pvt. Ltd.	IND	T: +91/982 05 43 424	F: +91/22 26163 540